


## HELIUS- Installation Diagram for Separate Control

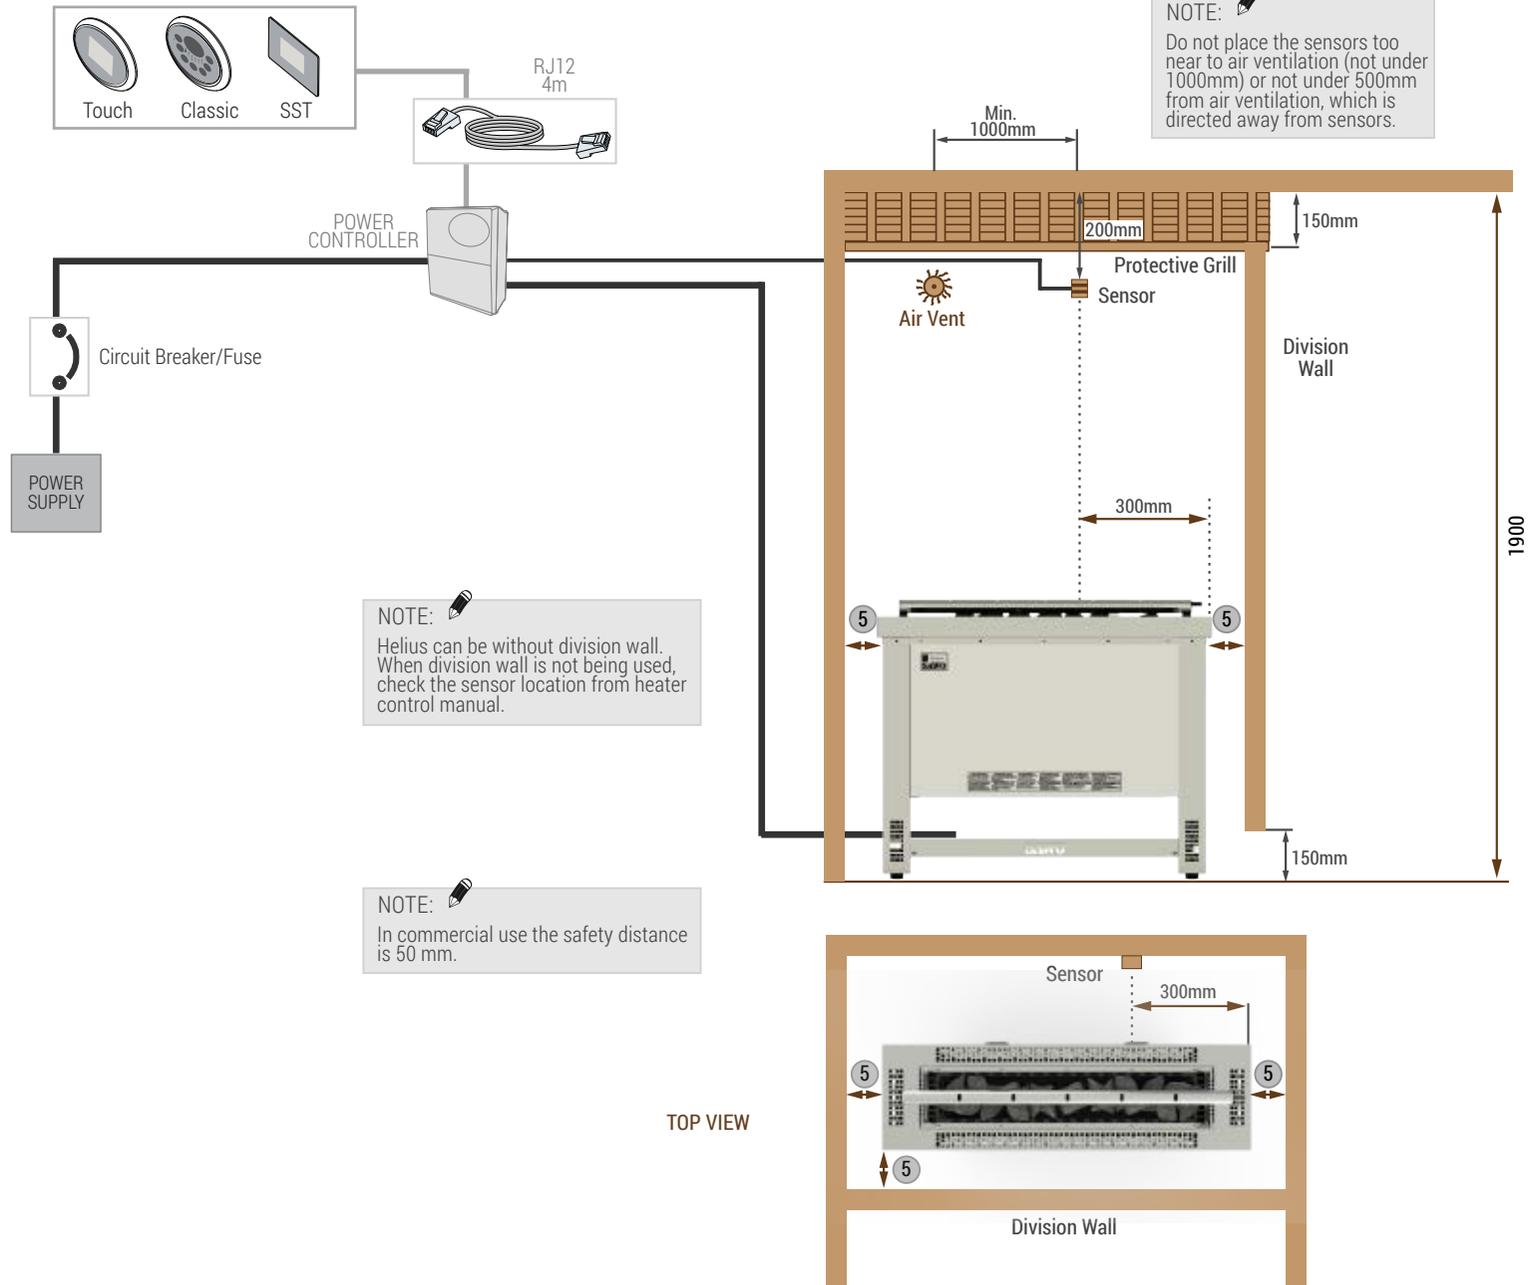

**NOTE:**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

**NOTE:**  
Helius can be without division wall. When division wall is not being used, check the sensor location from heater control manual.

**NOTE:**  
In commercial use the safety distance is 50 mm.