


## MINI COMBI HEATER- Installation Diagram for Separate Control

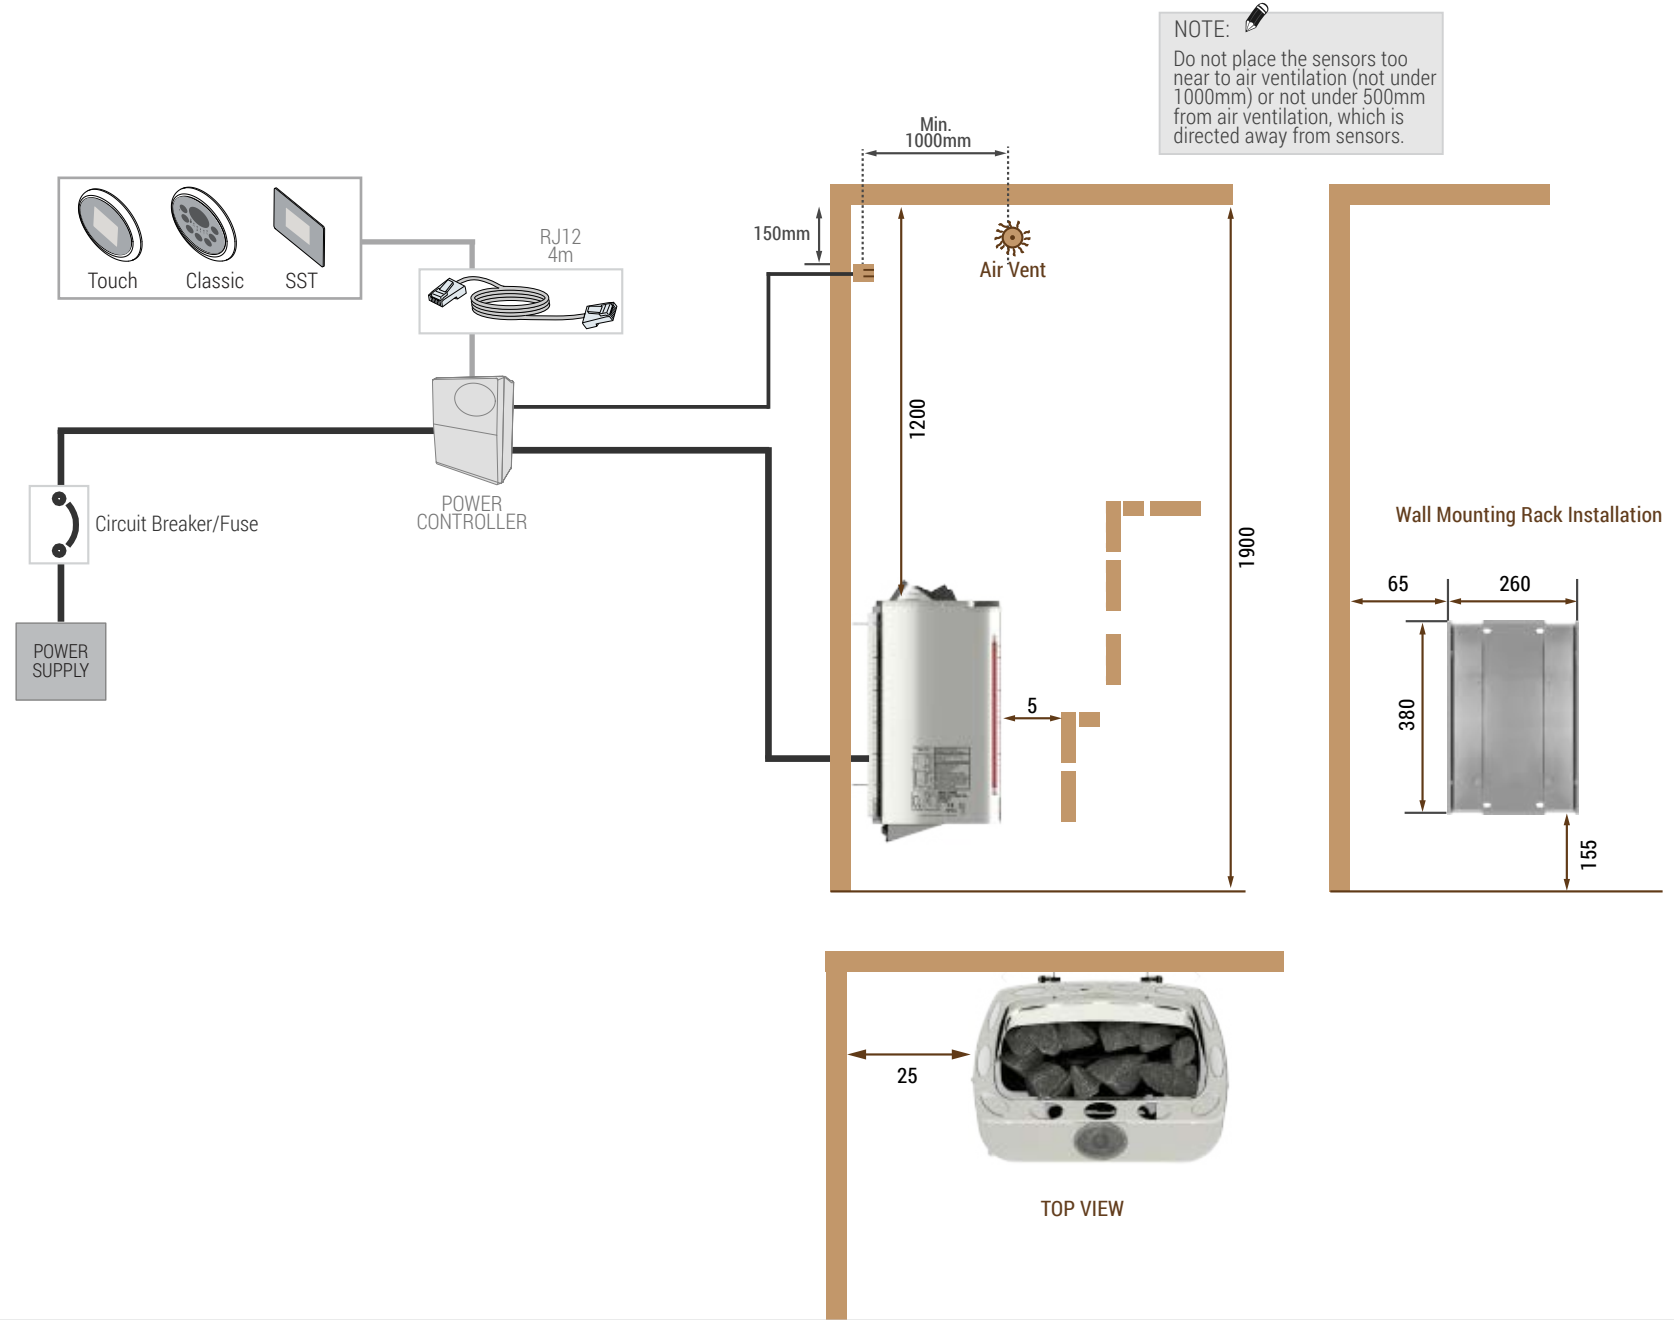

**NOTE:**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.