



TAURUS- Installation Diagram for Separate Control

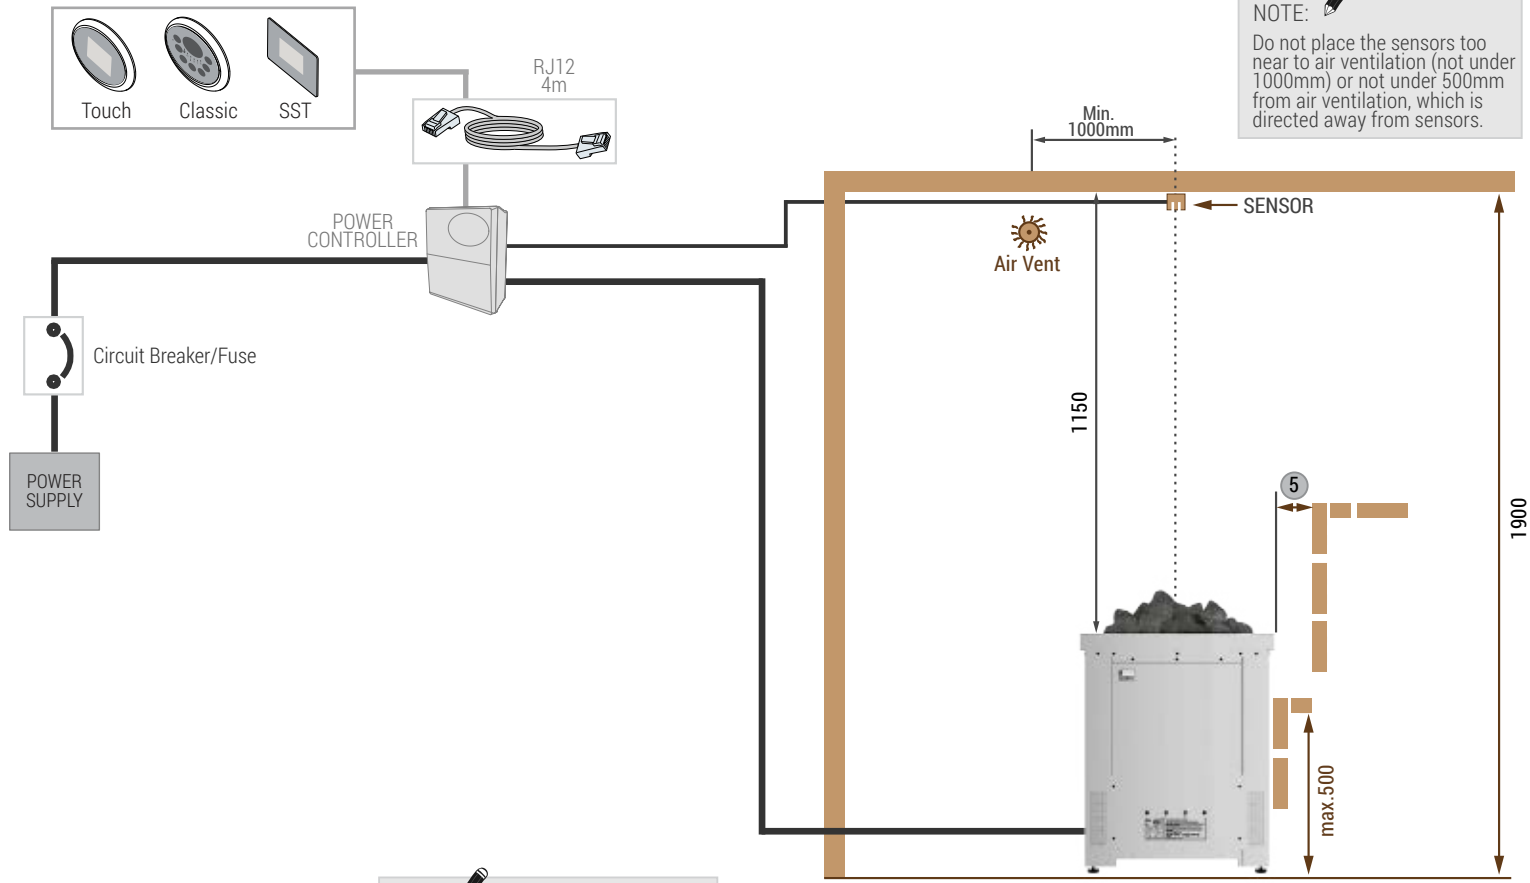

NOTE:
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

NOTE:
In commercial use the safety distance is 50 mm.

TOP VIEW

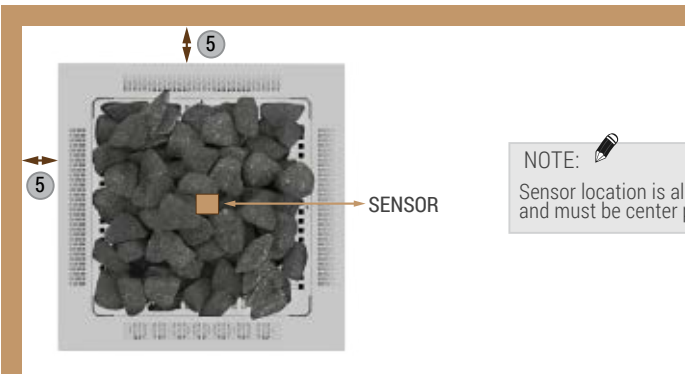

NOTE:
Sensor location is always in the ceiling and must be center part of the heater.