

TOWER ROUND HEATER - Installation Diagram for Separate Control (NS)

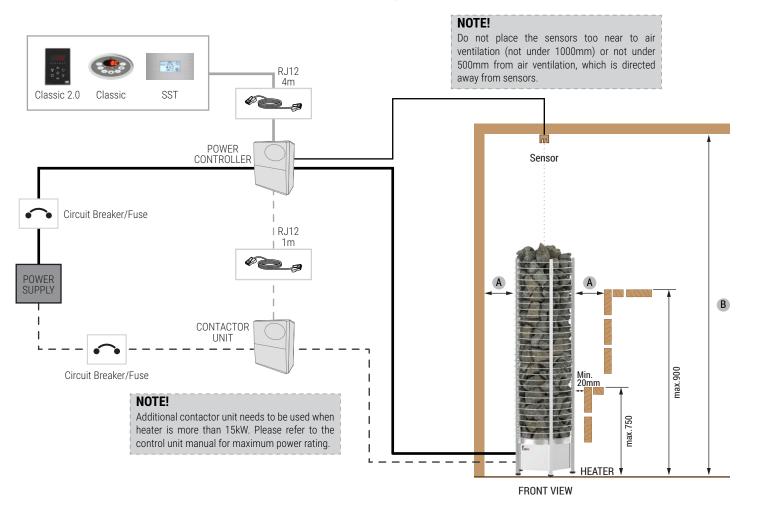

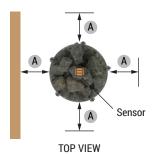


Heater Model	Α	В
TH2-30NS	100	1900
TH3-35NS	100	1900
TH3-45NS	100	1900
TH3-60NS	150	1900
TH4-60NS	150	1900
TH5-80NS	150	1900
TH5-90NS	200	1900
TH6-80NS	100	1900
TH6-90NS	100	1900
TH6-105NS	150	1900
TH6-120NS	200	2100
TH9-105NS	150	2100
TH9-120NS	150	2100
TH9-150NS	200	2100
TH9-180NS	200	2100
TH12-150NS	200	2300
TH12-180NS	200	2300
TH12-210NS	200	2300
TH12-240NS	200	2300




TOWER ROUND HEATER- Installation Diagram for Innova Separate Control (Ni)



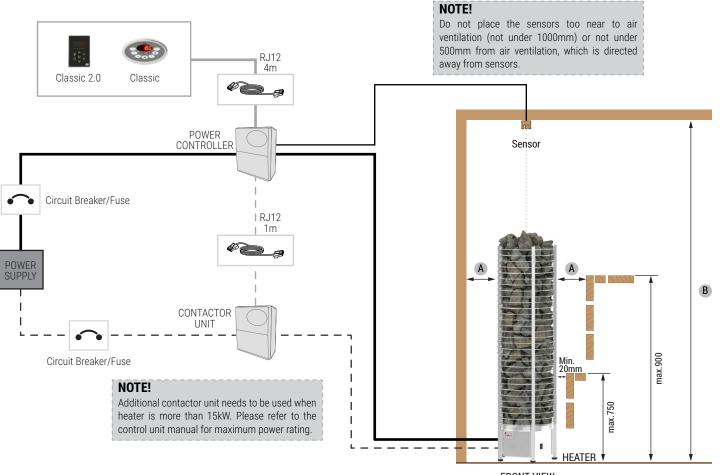

Heater Model	Α	В
TH6-80Ni	100	1900
TH6-90Ni	100	1900
TH6-105Ni	150	1900
TH6-120Ni	200	2100
TH9-105Ni	150	2100
TH9-120Ni	150	2100
TH9-150Ni	200	2100
TH9-180Ni	200	2100
TH12-150Ni	200	2300
TH12-180Ni	200	2300
TH12-210Ni	200	2300
TH12-240Ni	200	2300




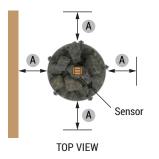

2 N


TOWER ROUND HEATER- Installation Diagram for Saunova 2.0 Control (Ni2)



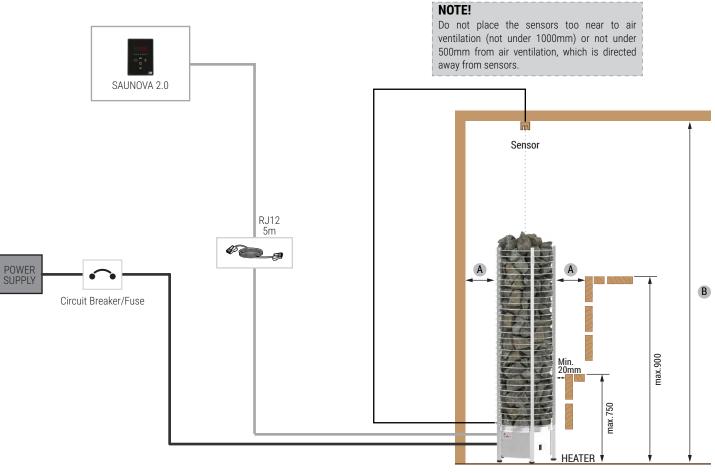


Heater Model	Α	В
TH2-30Ni2	150	1900
TH3-35Ni2	100	1900
TH3-45Ni2	100	1900
TH3-60Ni2	150	1900
TH4-60Ni2	150	1900
TH5-80Ni2	150	1900
TH5-90Ni2	150	1900
TH6-80Ni2	150	1900
TH6-90Ni2	150	1900



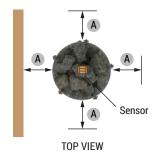

TOWER ROUND HEATER - Installation Diagram for Built-in Control (NB)



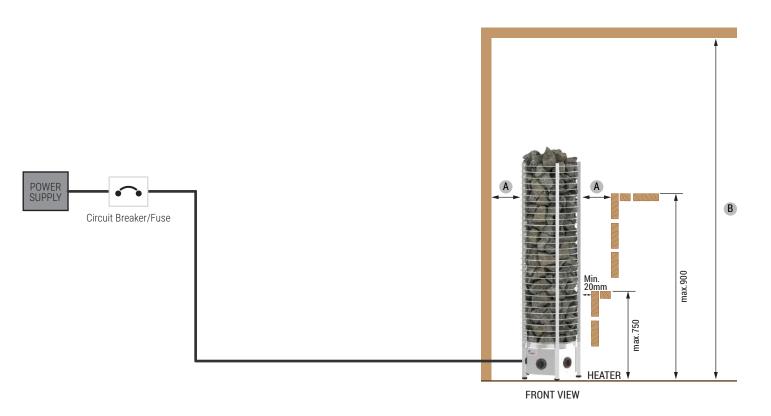

Heater Model	Α	В
TH2-30NB	100	1900
TH3-35NB	150	1900
TH3-45NB	150	1900
TH3-60NB	150	1900
TH4-60NB	150	1900
TH5-80NB	100	1900
TH6-80NB	100	1900
TH6-90NB	100	1900

