


Taurus Heaterguard Manual

Parts List Exterior

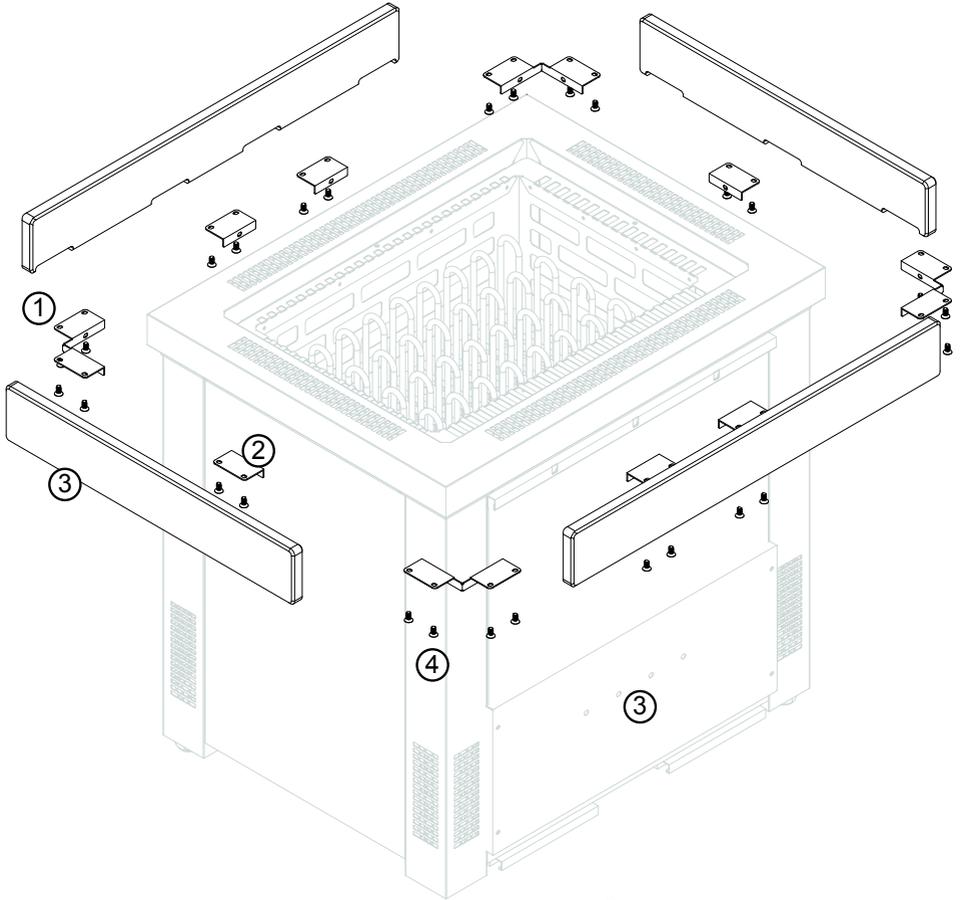

- 1. Corner Lock
- 2. Center Lock
- 3. Wood Guard
- 4. M6 screws

Requirements for Installation




Phillip Screwdriver


Heaterguard Installation

01 Remove existing screws from heater.

Take note: Do not remove all screws around the frame in one time when installing the metal holders. It should be installed one by one.

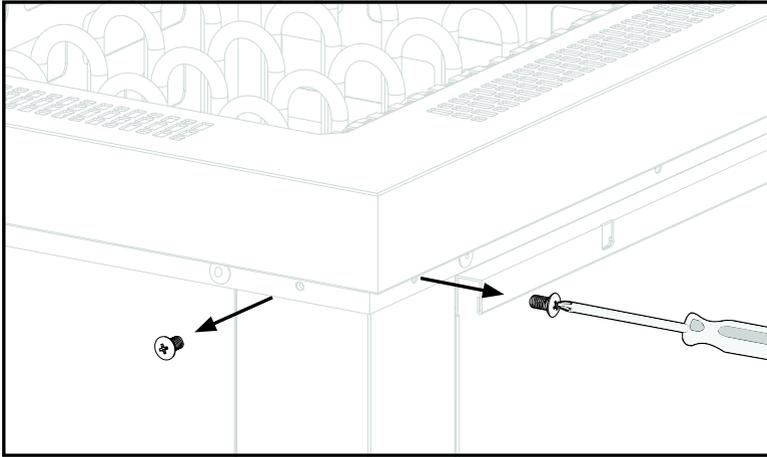

02 Attach corner and center locks and secure with previously removed screws.

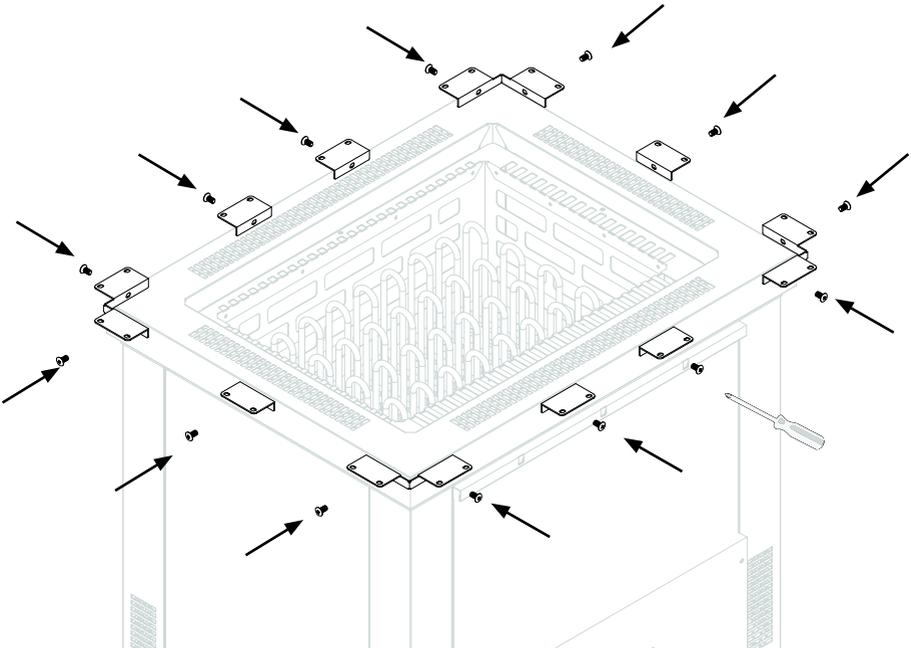

Heaterguard Installation

03 Attach wood guards and secure with screws

