


HEATERKING CORNER HEATER- Installation Diagram

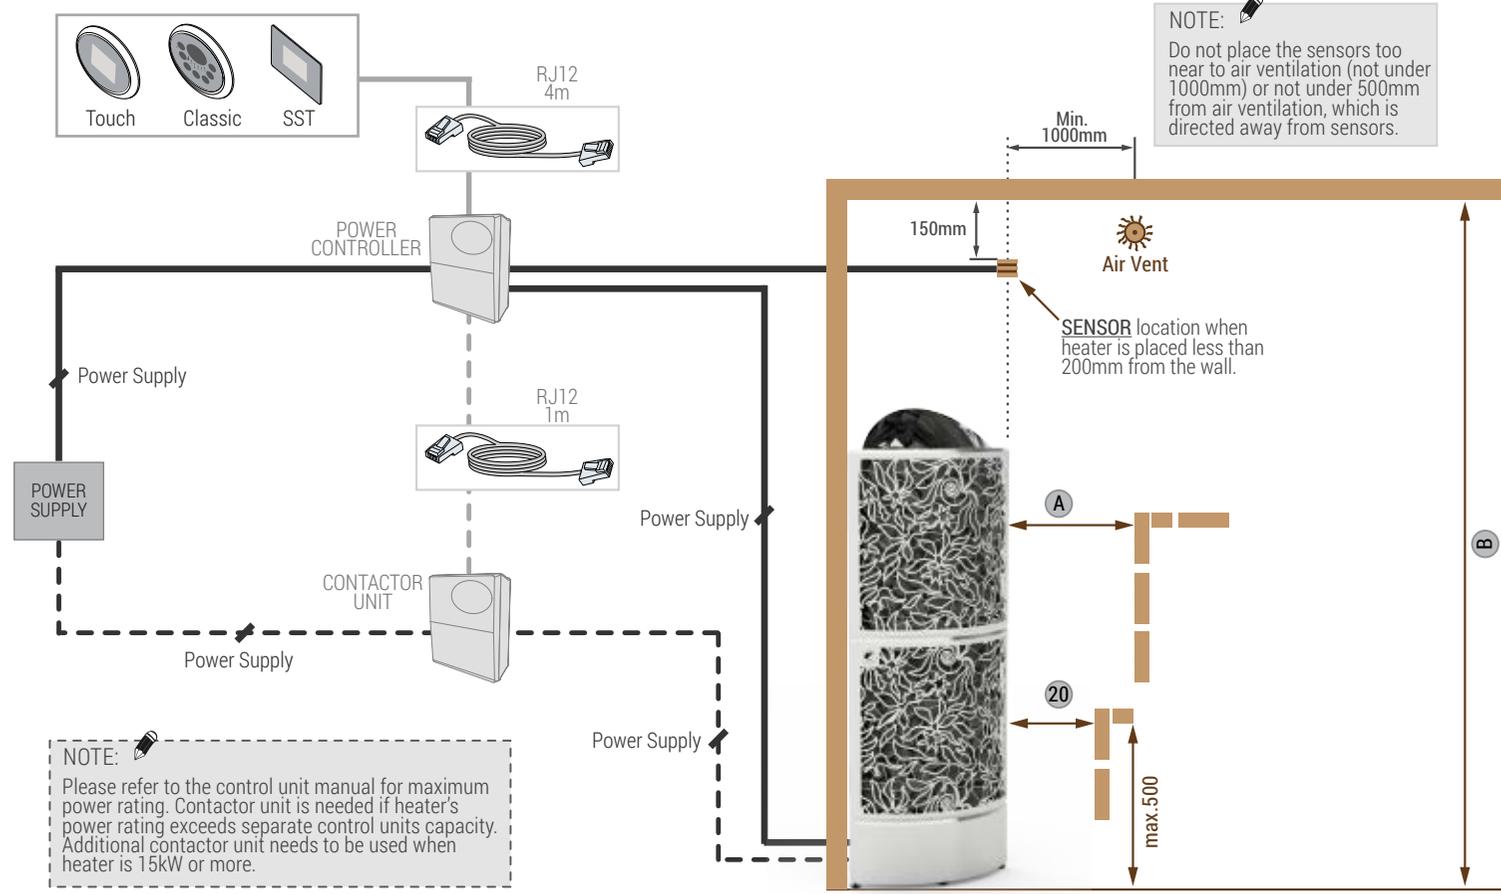

NOTE:
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

NOTE:
Please refer to the control unit manual for maximum power rating. Contactor unit is needed if heater's power rating exceeds separate control units capacity. Additional contactor unit needs to be used when heater is 15kW or more.

Minimum Safety Distances

	A	B
DRFT3-60NS-CNR	100	1900
DRFT3-35NS-CNR	100	1900
DRFT3-45NS-CNR	100	1900
DRFT3-60NS-CNR	100	1900
DRFT6-80NS-CNR	100	1900
DRFT6-90NS-CNR	100	1900
DRFT6-105N-CNR	100	1900
DRFT6-120N-CNR	100	2100

