



# NIMBUS COMBI HEATER - Installation Diagram for Separate Control (NS)

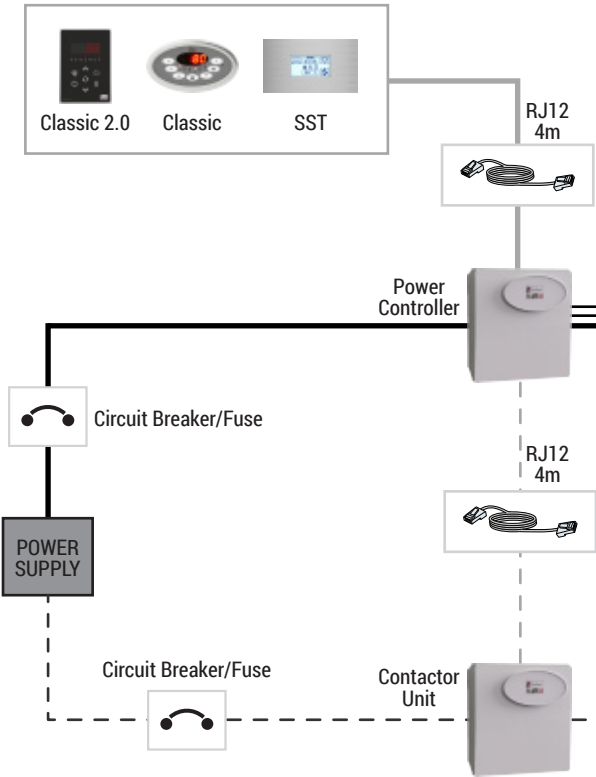


**NOTE!**  
Additional contactor unit needs to be used when heater is more than 15kW. Please refer to the control unit manual for maximum power rating.

**NOTE!**  
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

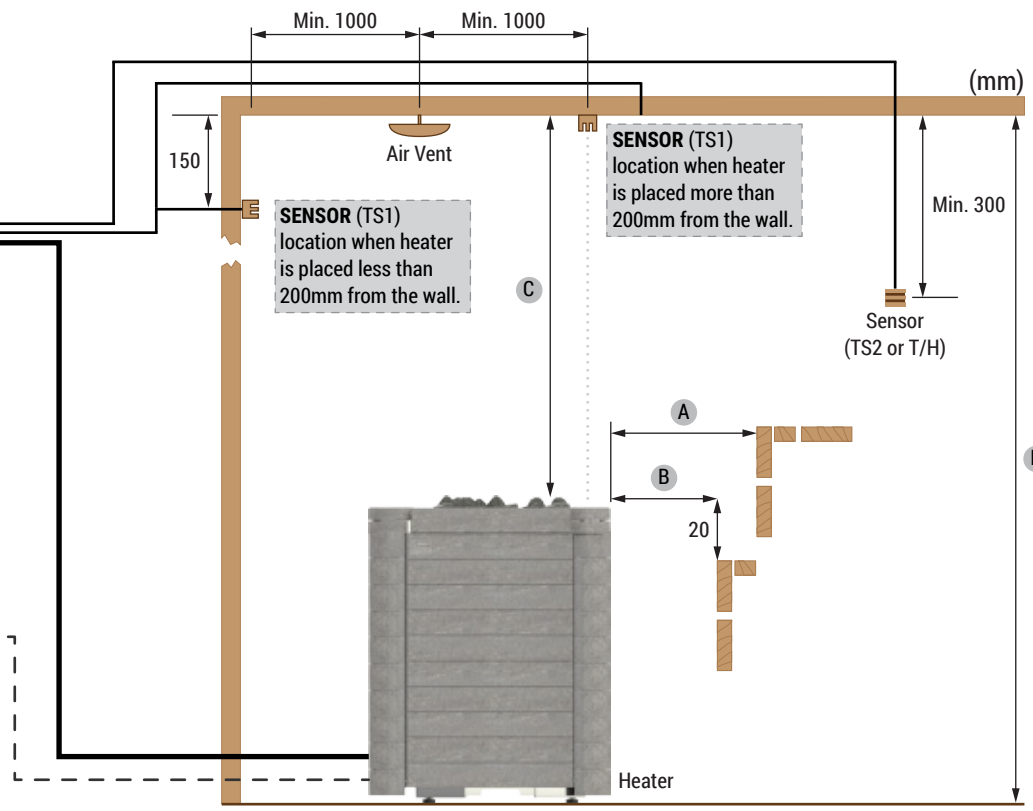

FRONT VIEW

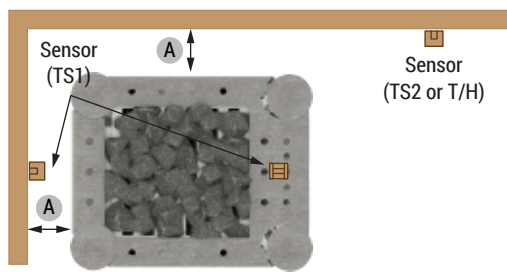

TOP VIEW

**Minimum Safety Distances**

Heater Model	A	B	C	D
NIMC-90N	50	30	1200	1900
NIMC-105N	50	30	1200	1900
NIMC-120N	130	70	1400	2100
NIMC-150N	160	100	1400	2100
NIMC-180N	160	100	1400	2100