

SCANDIA COMBI HEATER- Installation Diagram for Separate Control (NS)

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

