




ORION HEATER- Installation Diagram for Separate Control (NS)

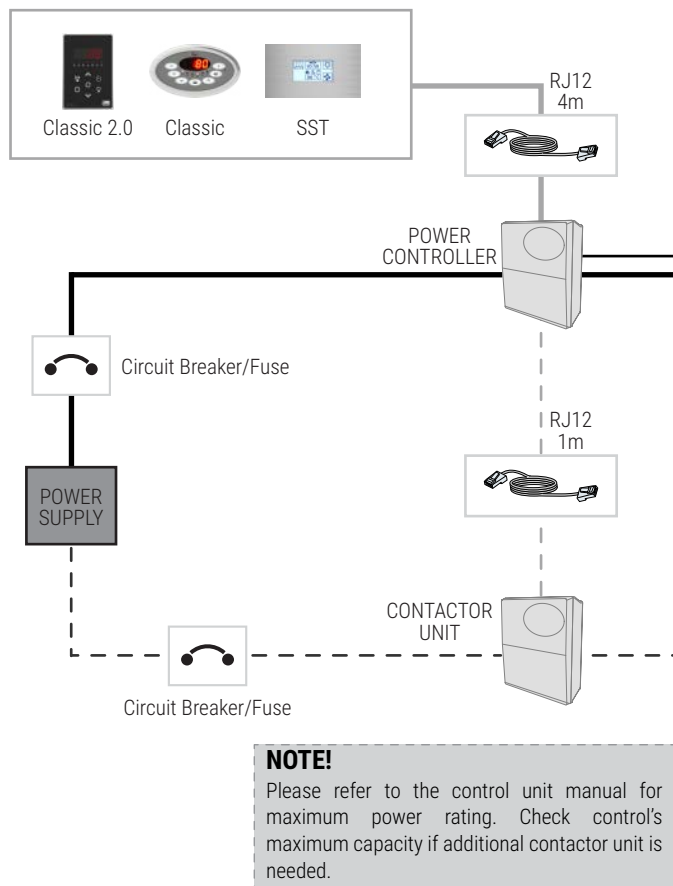

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

Minimum Safety Distances

Heater Model	A	B
ORN6-90NS	125	1900
ORN6-105NS	130	1900
ORN6-120NS	135	1900

