


SCANDIFIRE HEATER- Installation Diagram for Separate Control

NOTE:
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

Minimum Safety Distances

	A	B	C	D
SCA-45NS-DRF	60	50	135	155
SCA-60NS-DRF	60	50	135	155
SCA-80NS-DRF	60	50	135	235
SCA-90NS-DRF	60	50	135	235

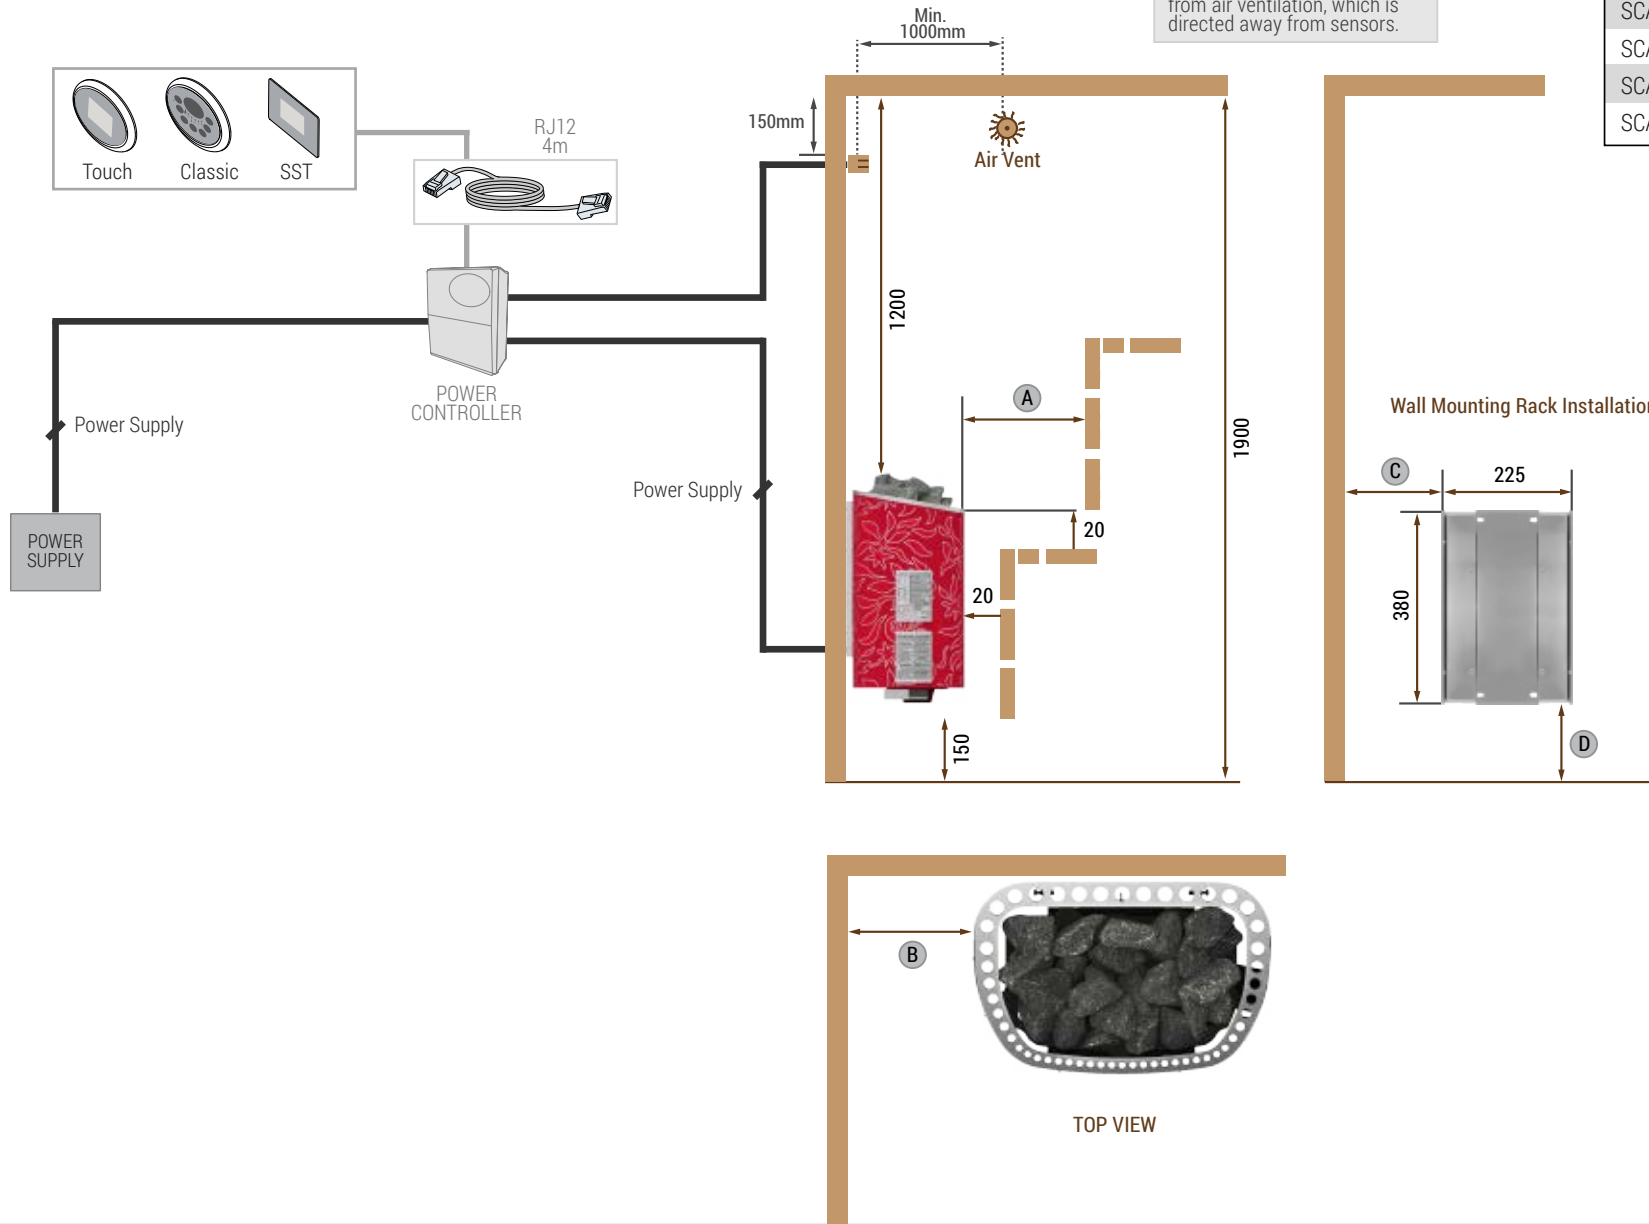

SCANDIFIRE HEATER- Installation Diagram for Built-in Control

Minimum Safety Distances

	A	B	C	D
SCA-45NB-DRF	100	100	185	155
SCA-60NB-DRF	100	100	185	155
SCA-80NB-DRF	100	100	185	235
SCA-90NB-DRF	100	100	185	235

