




1

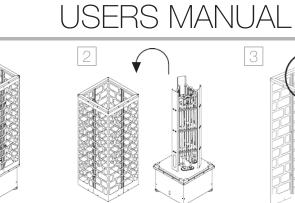

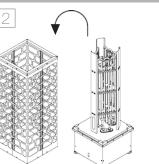


CUBOS PROTECTIVE COVER


It is advisable to install the Protective Cover with the casing only.

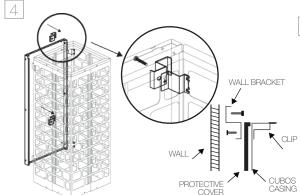

Attach the protective cover 1 together with the wall brackets to the clips.

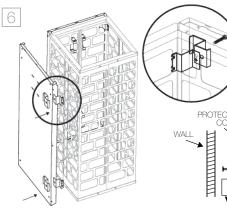

Attach the protective cover 2 together with the wall brackets to the clips in reversse position as protective cover 1.

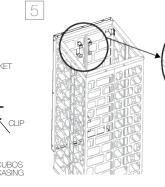

Bend the legs of the protective cover 1 clips to secure.


CORNER MODEL


Attach the clips to the corner top hole and below to place the

2 Ð


5

Protective Cover.

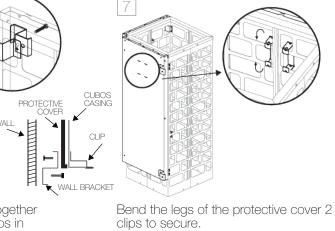


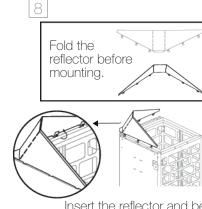

Insert the reflector and bend the legs to the assigned holes on the protective covers to fasten.

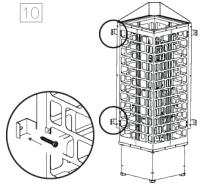


Secure the bracket with screws to the wall.

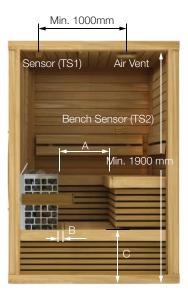

## Safety Distance (mm)



Corner Installation with Protective Cover



HEATER MODEL	A (MIN.)	B (MIN.)	C (MAX.)
CUB3-45 Ni2   NS   NB	100	45	700
CUB3-60 Ni2   NS   NB	100	45	700
CUB3-75 Ni2   NS   NB	100	45	700
CUB3-90 Ni2   NS   NB	125	45	700

