



A R I E S

Heater Series

The Aries family accommodates nearly any sauna room bringing amazingly soft and moist steam into the room, accompanied by its gorgeously beautiful SAWO pattern look.


When the sauna light hits the Black series' metal, it can create a stunning interplay of light and shadow, with different shades and reflections illuminating the room.



BLACK SERIES
Corner (NB), Round (NS), Wall (Ni2)



STAINLESS SERIES
Corner (NB), Round (NS), Wall (Ni2)

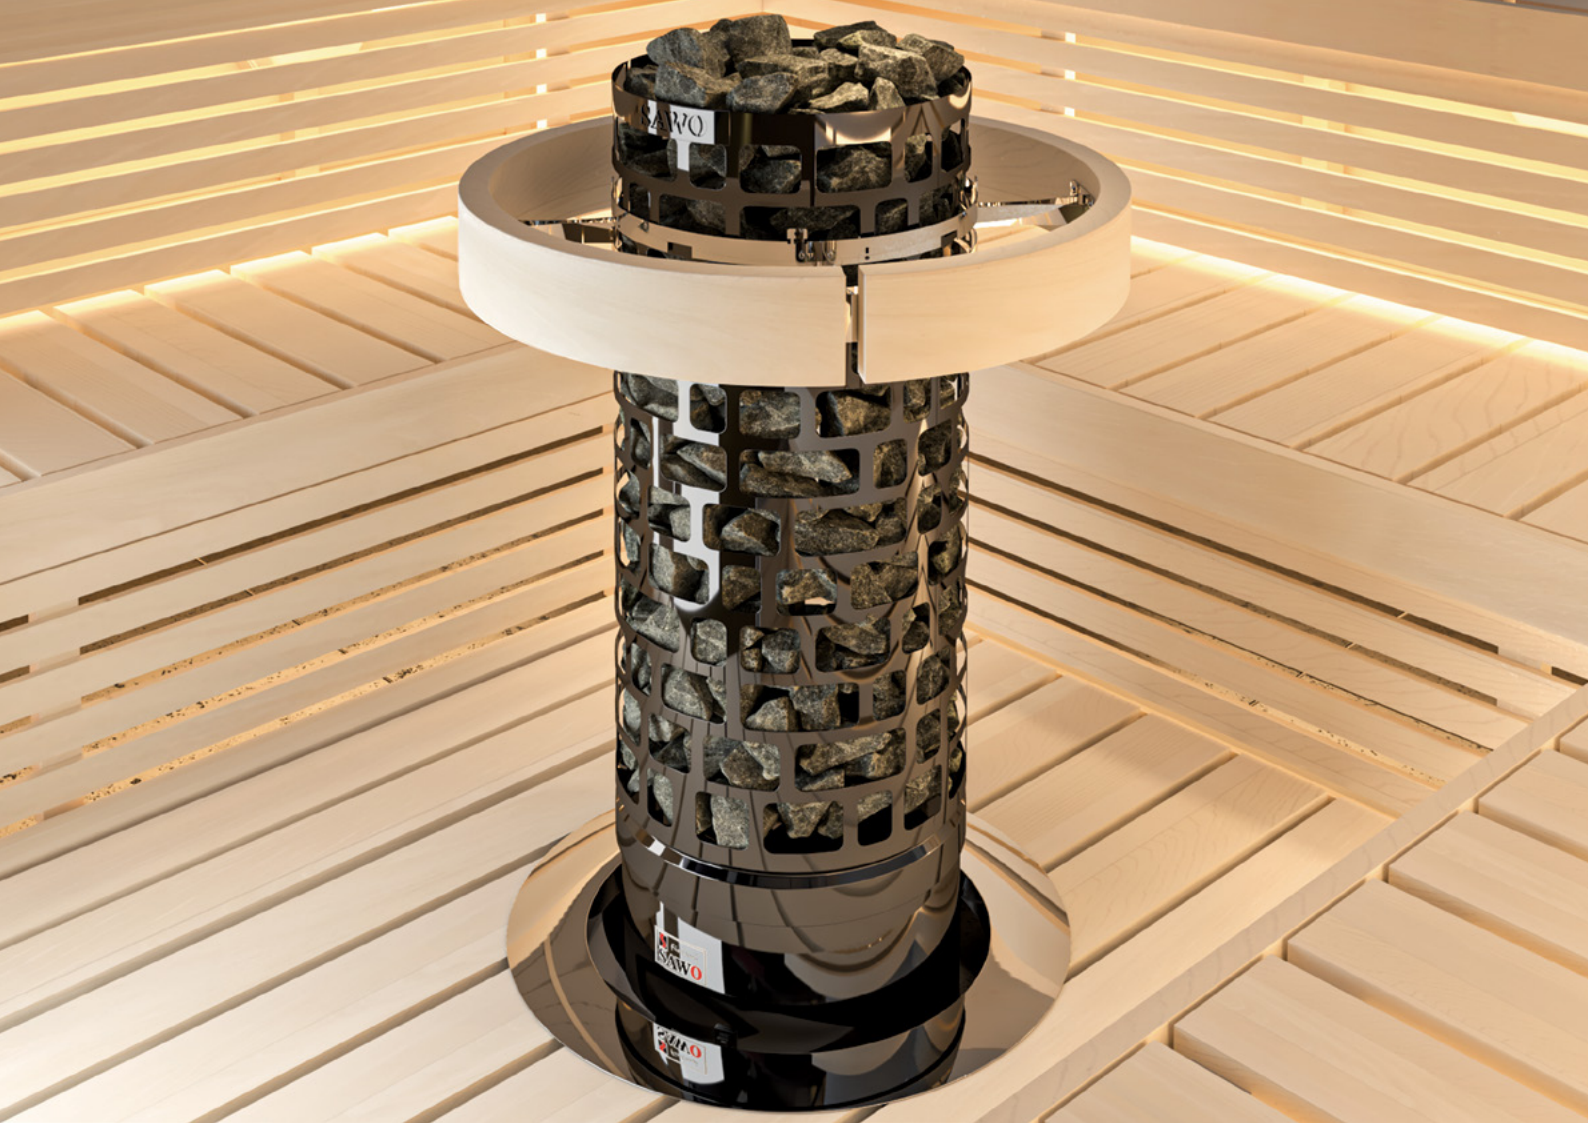

ARIES Round



BLACK SERIES
(NB, NS and Ni2)



STAINLESS SERIES
(NB, NS and Ni2)

The Aries Round floor-standing heater is the center of attention in the sauna room with its impressive stone capacity. When a heater has a great number of stones, the steam is softer and a lot moister, giving a very relaxing and rejuvenating sauna experience every time.

Aries Round can be controlled with the built-in control (NB), which can switch sides for flexible placing in the sauna, but also with separate control units (NS or Ni2). The Round heater is best suitable for small or medium-sized sauna rooms, between 3 to 26m³.

- » Stainless steel casing
- » Stone spacer inside to prolong heating elements lifespan
- » Floor standing
- » Can fit from 60kg to 110kg of stones
- » 4,5kW - 18kW power
- » Built-in, separate or Ni2 control
- » Round type
- » Adjustable legs


Technical DATA

Saunova 2.0 Control (Ni2)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45Ni2 ARI3-45Ni2-BL	4,5	3	6	300	300	930	60	100	1900
ARI3-60Ni2 ARI3-60Ni2-BL	6,0	5	8	300	300	930	60	100	1900
ARI3-75Ni2 ARI3-75Ni2-BL	7,5	7	12	300	300	930	60	100	1900
ARI3-90Ni2 ARI3-90Ni2-BL	9,0	8	14	300	300	930	60	100	1900

Installation Diagram

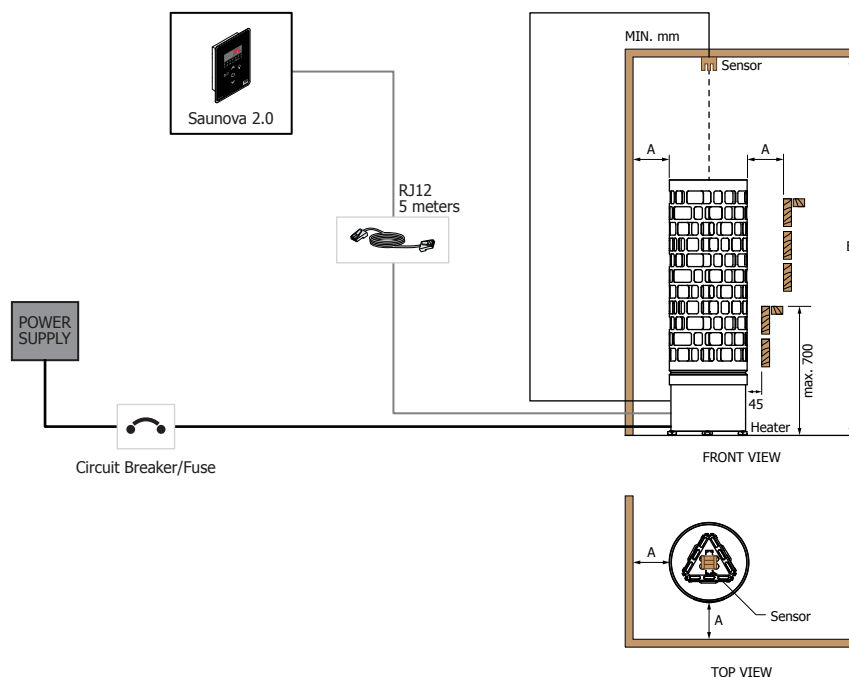

Minimum Safety Distances

NOTE!


Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

Separate Control (NS)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45NS ARI3-45NS-BL	4,5	3	6	300	300	930	60	100	1900
ARI3-60NS ARI3-60NS-BL	6,0	5	8	300	300	930	60	100	1900
ARI3-75NS ARI3-75NS-BL	7,5	7	12	300	300	930	60	100	1900
ARI3-90NS ARI3-90NS-BL	9,0	8	14	300	300	930	60	100	1900
ARI6-90NS ARI6-90NS-BL	9,0	8	15	440	440	930	110	100	1900
ARI6-105NS ARI6-105NS-BL	10,5	9	16	440	440	930	110	100	1900
ARI6-120NS ARI6-120NS-BL	12,0	10	18	440	440	930	110	100	2100
ARI6-150NS ARI6-150NS-BL	15,0	13	24	440	440	930	110	100	2100
ARI6-180NS ARI6-180NS-BL	18,0	18	30	440	440	930	110	125	2100

Installation Diagram

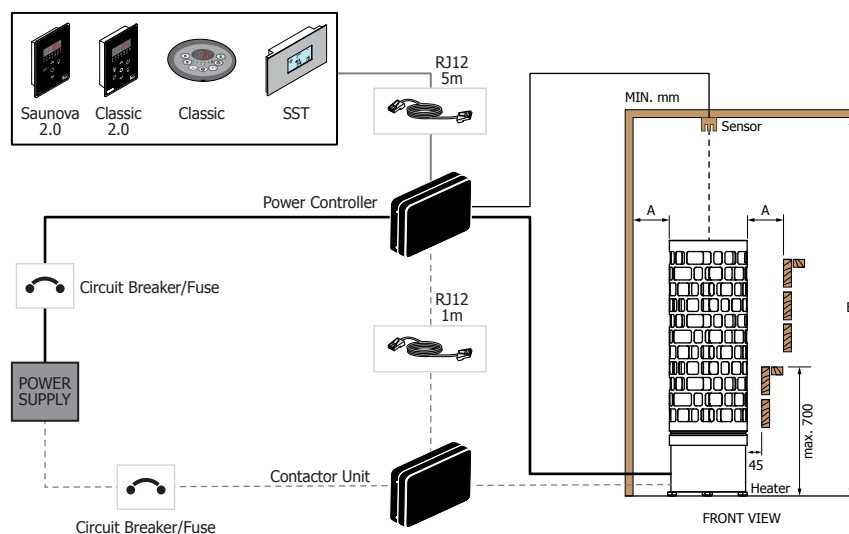

Minimum Safety Distances

NOTE!

Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

NOTE!

Additional Contactor unit is needed if the heater's power exceeds the Power Controller's capacity (Saunova 10,5kW, Innova 15kW).


Built-in Control (NB)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45NB ARI3-45NB-BL	4,5	3	6	300	300	930	60	100	1900
ARI3-60NB ARI3-60NB-BL	6,0	5	8	300	300	930	60	100	1900
ARI3-75NB ARI3-75NB-BL	7,5	7	12	300	300	930	60	100	1900
ARI3-90NB ARI3-90NB-BL	9,0	8	14	300	300	930	60	100	1900
ARI6-90NB ARI6-90NB-BL	9,0	8	15	440	440	930	110	100	1900

Installation Diagram

Minimum Safety Distances

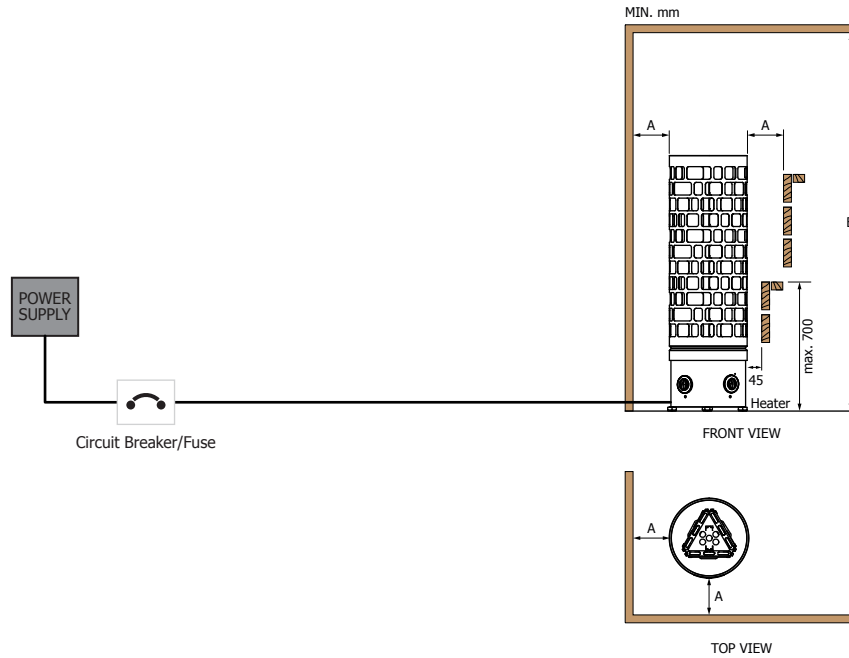



ARIES Wall



BLACK SERIES
(NB, NS and Ni2)



STAINLESS SERIES
(NB, NS and Ni2)

Aries Wall heaters can fit even smaller saunas but do accommodate rooms up to 14m³. With the floor-standing wall heater you can have a massive amount of stones in the sauna. Great number of stones give very moist and soft steam, and it looks stunning in the room. You can even replace your old wall-mounted heater with the Aries Wall, which nicely covers the markings of the old wall-mounted heater.

Aries Wall can be controlled with the built-in control (NB), which can switch sides for flexible placing in the sauna, but also with separate control units (NS or Ni2). The Wall heater is best suitable for small or medium-sized sauna rooms, between 3 to 14m³.

- » Stainless steel casing
- » Stone spacer inside to prolong heating elements lifespan
- » Floor standing
- » Can fit 65kg of stones
- » 4,5kW - 9kW power
- » Built-in, separate or Ni2 control
- » Wall type
- » Adjustable legs

Technical DATA


Saunova 2.0 Control (Ni2)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45Ni2-WL ARI3-45Ni2-WL-BL	4,5	3	6	415	*250	1030	65	100	1900
ARI3-60Ni2-WL ARI3-60Ni2-WL-BL	6,0	5	8	415	*250	1030	65	100	1900
ARI3-75Ni2-WL ARI3-75Ni2-WL-BL	7,5	7	12	415	*250	1030	65	100	1900
ARI3-90Ni2-WL ARI3-90Ni2-WL-BL	9,0	8	14	415	*250	1030	65	100	1900

**Depth when installed to the wall.*

Installation Diagram

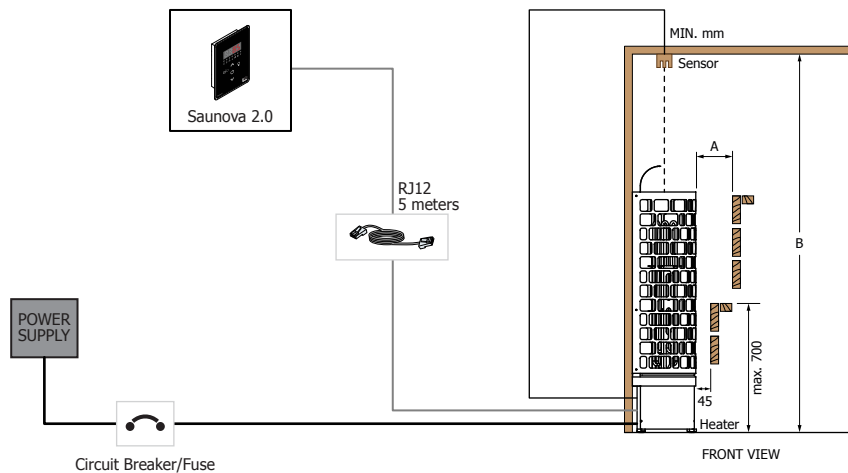

Minimum Safety Distances

NOTE!

Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.


Separate Control (NS)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45NS-WL ARI3-45NS-WL-BL	4,5	3	6	415	*250	1030	65	100	1900
ARI3-60NS-WL ARI3-60NS-WL-BL	6,0	5	8	415	*250	1030	65	100	1900
ARI3-75NS-WL ARI3-75NS-WL-BL	7,5	7	12	415	*250	1030	65	100	1900
ARI3-90NS-WL ARI3-90NS-WL-BL	9,0	8	14	415	*250	1030	65	100	1900

**Depth when installed to the wall.*

Installation Diagram

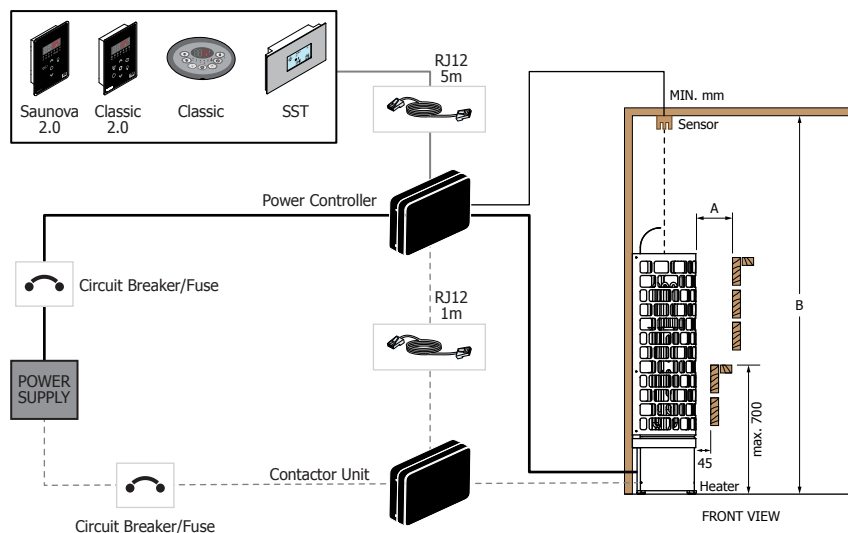

Minimum Safety Distances

NOTE!

Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

NOTE!

Additional Contactor unit is needed if the heater's power exceeds the Power Controller's capacity (Saunova 10,5kW, Innova 15kW).

TOP VIEW


Built-in Control (NB)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45NB-WL ARI3-45NB-WL-BL	4,5	3	6	415	*250	1030	65	100	1900
ARI3-60NB-WL ARI3-60NB-WL-BL	6,0	5	8	415	*250	1030	65	100	1900
ARI3-75NB-WL ARI3-75NB-WL-BL	7,5	7	12	415	*250	1030	65	100	1900
ARI3-90NB-WL ARI3-90NB-WL-BL	9,0	8	14	415	*250	1030	65	100	1900

Installation Diagram

Minimum Safety Distances

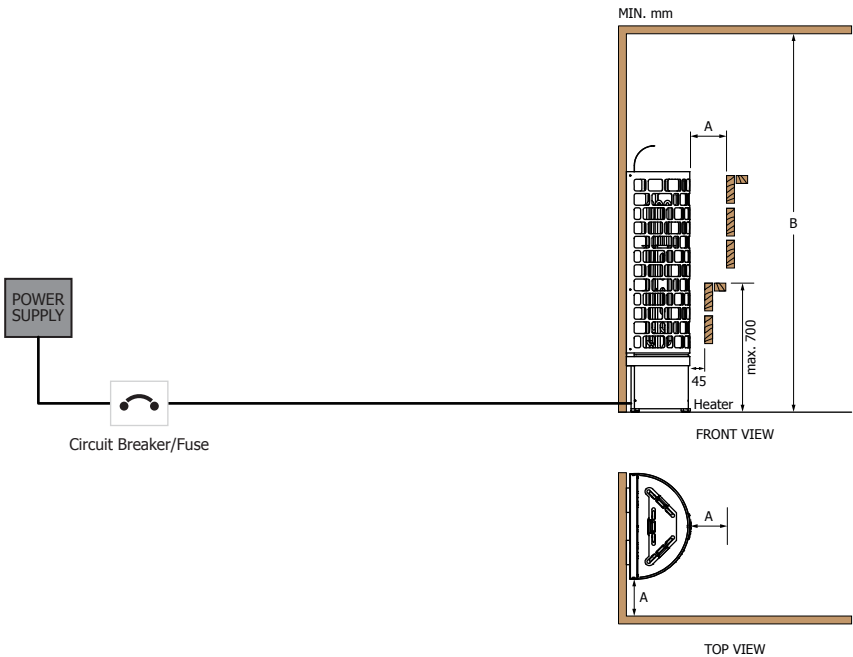



ARIES Corner



BLACK SERIES
(NB, NS and Ni2)

The Aries Corner heater only conserves a limited sauna room space, so it is, besides the medium-sized rooms, also ideal for the very small ones starting from 3m³. The tiniest rooms can have an impressive stone amount with the Aries Corner, but the Corner model also accommodates rooms up to 14m³.

Aries Corner can be controlled with the built-in control (NB), which can switch sides for flexible placing in the sauna, but also with separate control units (NS or Ni2).



STAINLESS SERIES
(NB, NS and Ni2)

- » Stainless steel casing
- » Stone spacer inside to prolong heating elements lifespan
- » Floor standing
- » Can fit 65kg of stones
- » 4,5kW - 9kW power
- » Built-in, separate or Ni2 control
- » Corner type
- » Adjustable legs

Technical DATA


Saunova 2.0 Control (Ni2)




HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45Ni2-CNR ARI3-45Ni2-CNR-BL	4,5	3	6	335	*335	1000	65	100	1900
ARI3-60Ni2-CNR ARI3-60Ni2-CNR-BL	6,0	5	8	335	*335	1000	65	100	1900
ARI3-75Ni2-CNR ARI3-75Ni2-CNR-BL	7,5	7	12	335	*335	1000	65	100	1900
ARI3-90Ni2-CNR ARI3-90Ni2-CNR-BL	9,0	8	14	335	*335	1000	65	100	1900

**Depth when installed to the wall.*

Installation Diagram

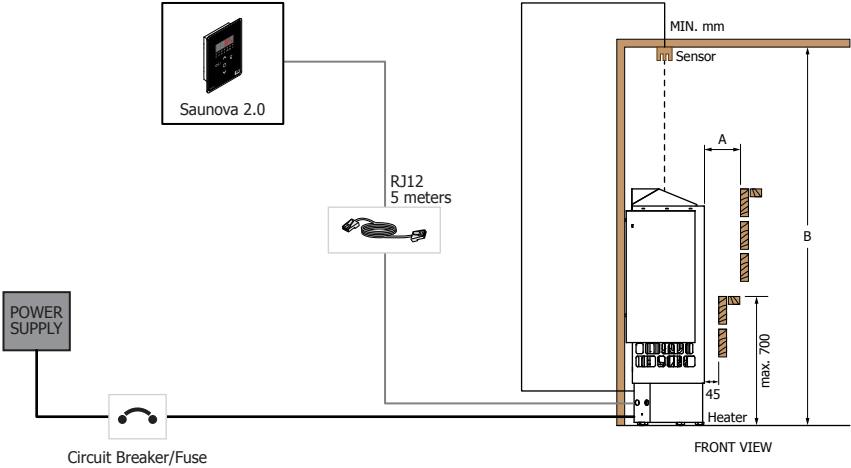

Minimum Safety Distances

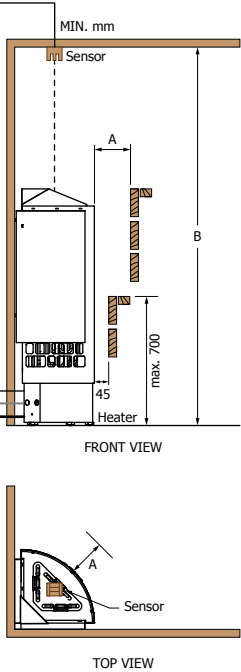

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.


Separate Control (NS)




HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45NS-CNR ARI3-45NS-CNR-BL	4,5	3	6	335	*335	1000	65	100	1900
ARI3-60NS-CNR ARI3-60NS-CNR-BL	6,0	5	8	335	*335	1000	65	100	1900
ARI3-75NS-CNR ARI3-75NS-CNR-BL	7,5	7	12	335	*335	1000	65	100	1900
ARI3-90NS-CNR ARI3-90NS-CNR-BL	9,0	8	14	335	*335	1000	65	100	1900

**Depth when installed to the wall.*

Installation Diagram

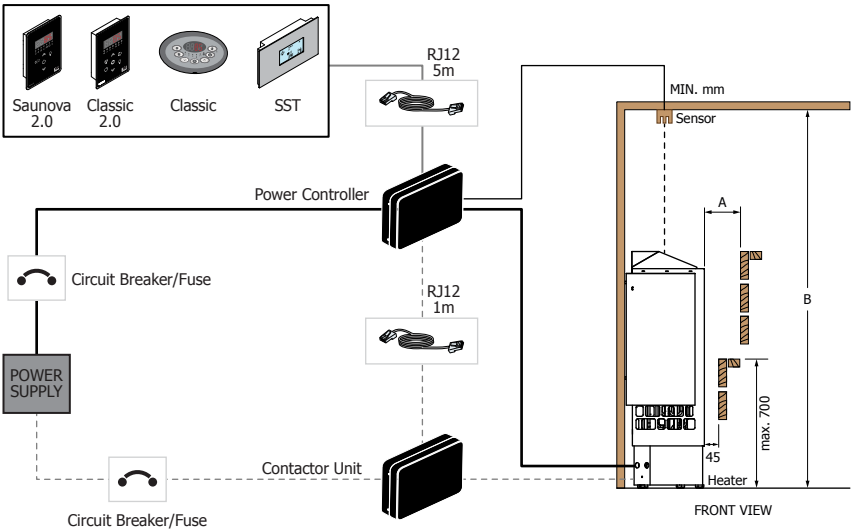

Minimum Safety Distances

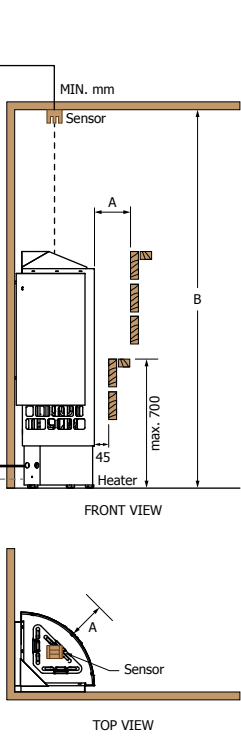

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

NOTE!
Additional Contactor unit is needed if the heater's power exceeds the Power Controller's capacity (Saunova 10,5kW, Innova 15kW).


Built-in Control (NB)



HEATER MODEL	kW	SAUNA ROOM		SIZE OF HEATER			STONES (kg)	MINIMUM SAFETY DISTANCES	
		MIN	MAX	WIDTH	DEPTH	HEIGHT		A	B
ARI3-45NB-CNR ARI3-45NB-CNR-BL	4,5	3	6	335	*335	1000	65	100	1900
ARI3-60NB-CNR ARI3-60NB-CNR-BL	6,0	5	8	335	*335	1000	65	100	1900
ARI3-75NB-CNR ARI3-75NB-CNR-BL	7,5	7	12	335	*335	1000	65	100	1900
ARI3-90NB-CNR ARI3-90NB-CNR-BL	9,0	8	14	335	*335	1000	65	100	1900

Installation Diagram

Minimum Safety Distances

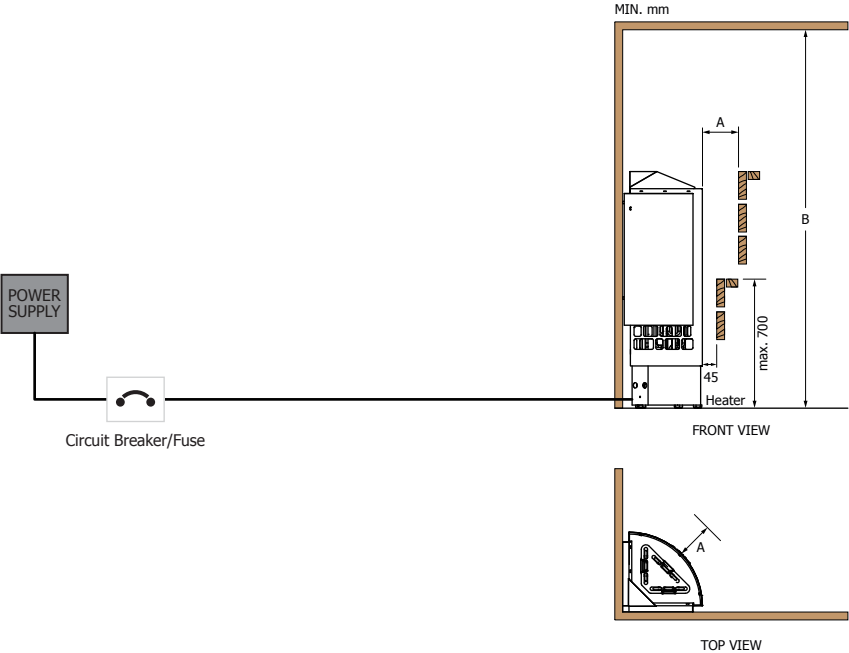



Heater GUARDS & Integration COLLARS

To add safety into the sauna, heater guards are excellent in preventing accidental contact with the heater. The guard rails come in cedar or aspen wood, bringing natural look to the heater.



WOODEN
Guard Rail

Integration collars can enhance the aesthetic of your sauna interior. The collars are available in thick hair-lined stainless steel, soft soapstone, or strong laminated wood. Regardless of your choice, each collar is designed to fit seamlessly with the Round, Wall, and Corner Aries heaters.



STAINLESS
Integration Collar



SOAPSTONE
Integration Collar



WOODEN
Integration Collar

Technical DATA

Wooden Guard Rail: (D) Cedar (A) Aspen

Aries (ARI)



Round

MODEL	SIZE OF GUARD RAIL		
	WIDTH	DEPTH	HEIGHT
ARI-GUARD-W3-D A	550	550	90
ARI-GUARD-W6-D A	690	690	90



Wall

MODEL	SIZE OF GUARD RAIL		
	WIDTH	DEPTH	HEIGHT
ARI-GUARD-W3-WL-D A	665	365	90



Corner

MODEL	SIZE OF GUARD RAIL		
	WIDTH	DEPTH	HEIGHT
ARI-GUARD-W3-CNR-D A	635	160	90

HEATERS
ARI3
ARI6

Stainless Integration Collar

Aries (ARI)



Round

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-ST4	540	540	45
TH-COLLAR-ST9	720	720	45



Wall

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-ST4-WL	700	380	45



Corner

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-ST4-CNR	480	480	45

HEATERS
ARI3
ARI6

Soapstone Integration Collar

Aries (ARI)



Round

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-S4	560	560	45
TH-COLLAR-S9	690	690	45



Wall

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-S4-WL	720	390	45



Corner

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-S4-CNR	480	480	45

HEATERS
ARI3
ARI6

Wooden Integration Collar: (D) Cedar (A) Aspen

Aries (ARI)



Round

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-W4-D A	560	560	45
TH-COLLAR-W9-D A	690	690	45



Wall

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-W4-WL-D A	720	390	45



Corner

MODEL	SIZE OF COLLAR		
	WIDTH	DEPTH	HEIGHT
TH-COLLAR-W4-CNR-D A	480	480	45

HEATERS
ARI3
ARI6



www.sawo.com